


N1 NOZZLE

Locate N1 nozzle along top rear of the engine and mount using an existing nozzle mounting point.


- Aim nozzle down and forward
- Covers top of right muffler

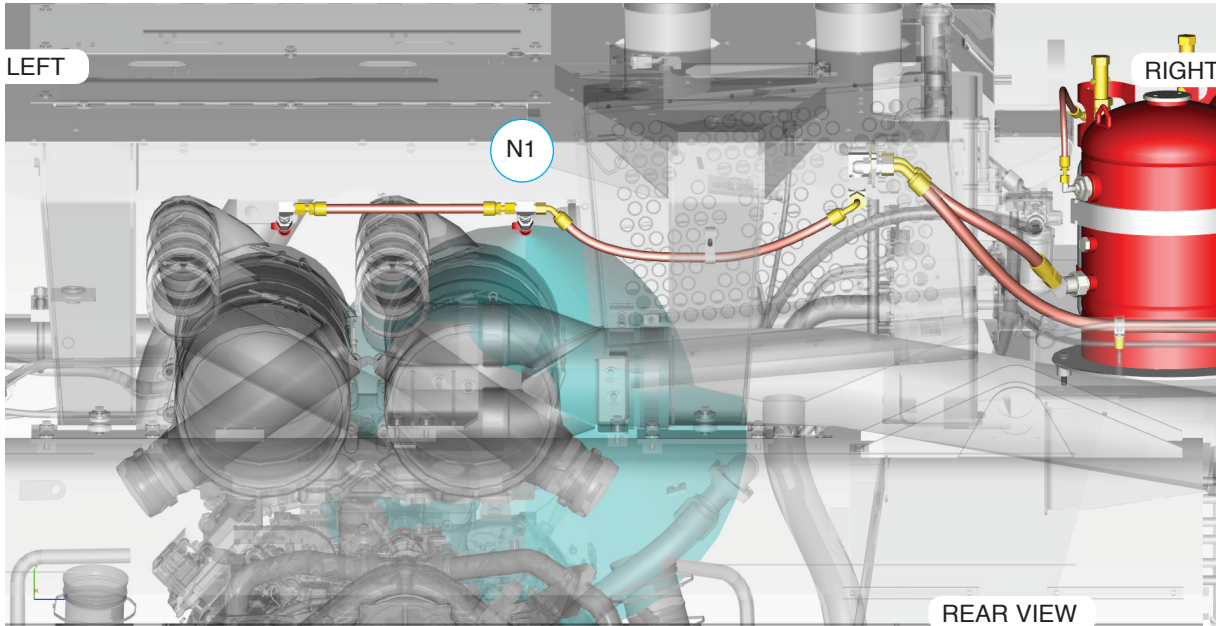

N2 NOZZLE

Locate N2 nozzle along top rear of engine and mount using an existing nozzle mounting point.

- Aim nozzle down and forward
- Covers top of left muffler

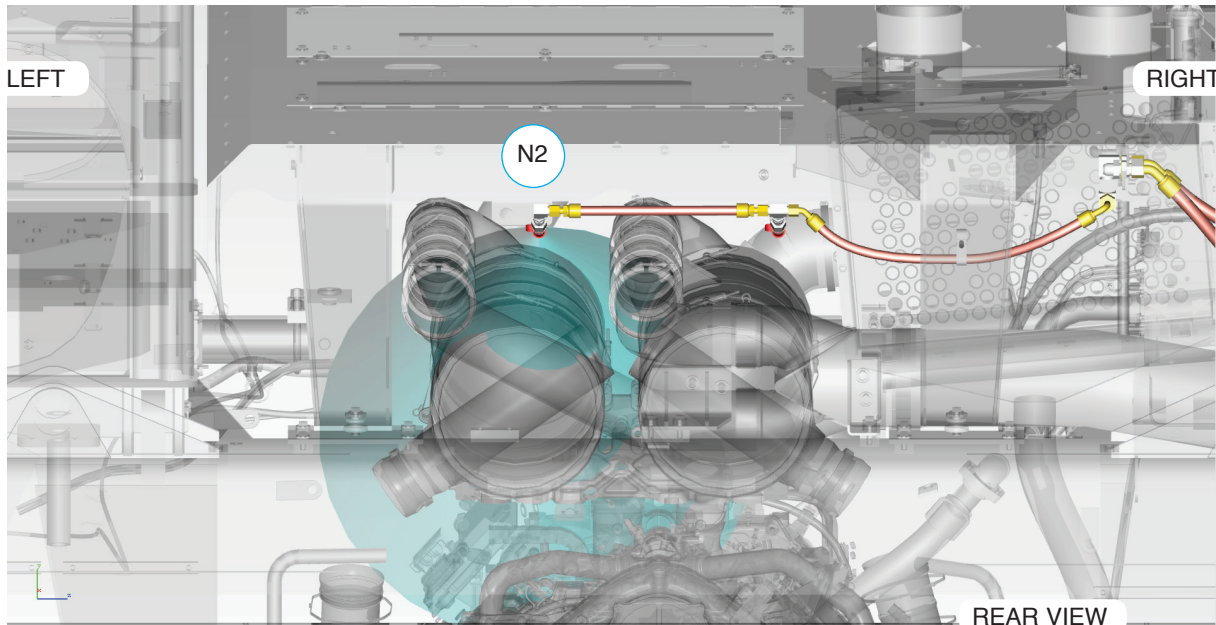

CAT 777G, LVS-9.5 NOZZLE SCHEDULE


(Form No. F-2017223-00)

PAGE 2 REV. 0 2017-SEP-22

N3 NOZZLE

Locate N3 nozzle on right side front of the horse collar and mount using an existing nozzle mounting point.


- Aim nozzle down and in
- Covers rear of the engine

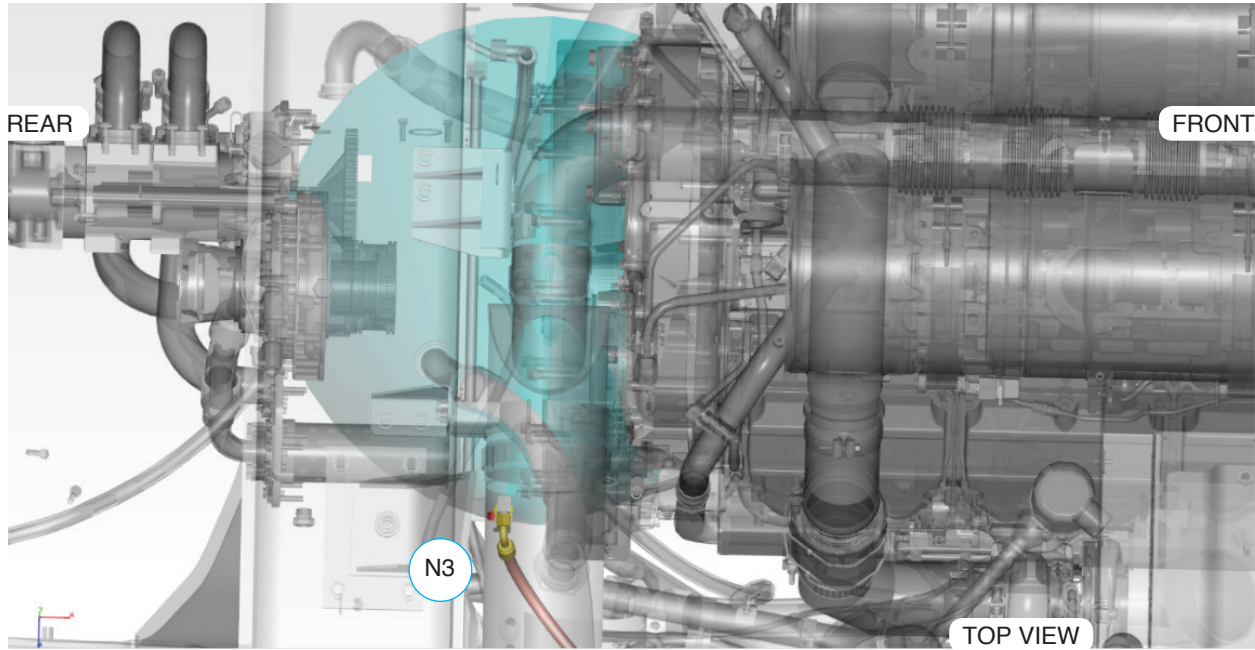

N4 NOZZLE

Locate N4 nozzle on right side of the engine compartment and mount on second tee assembly.


- Aim nozzle down and forward
- Covers the hydraulic valve bank

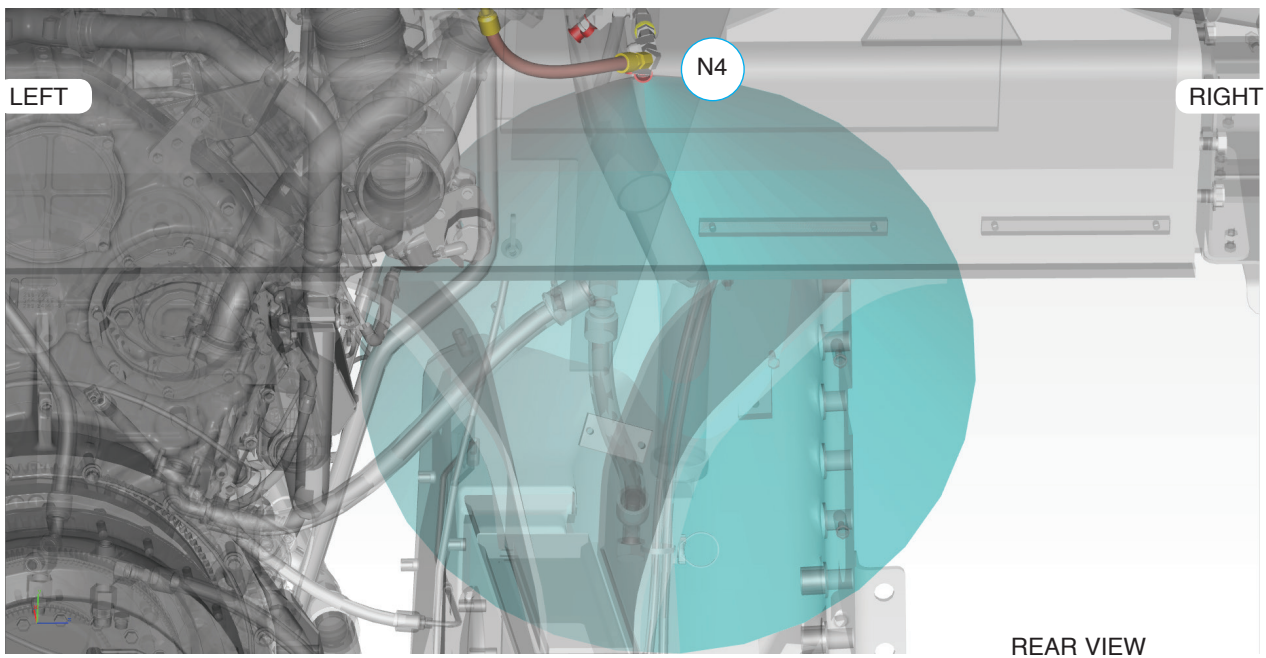

N5 NOZZLE

Locate N5 nozzle on right side of engine compartment and mount on the second tee assembly.


- Aim nozzle down and in
- Covers right rear of the engine

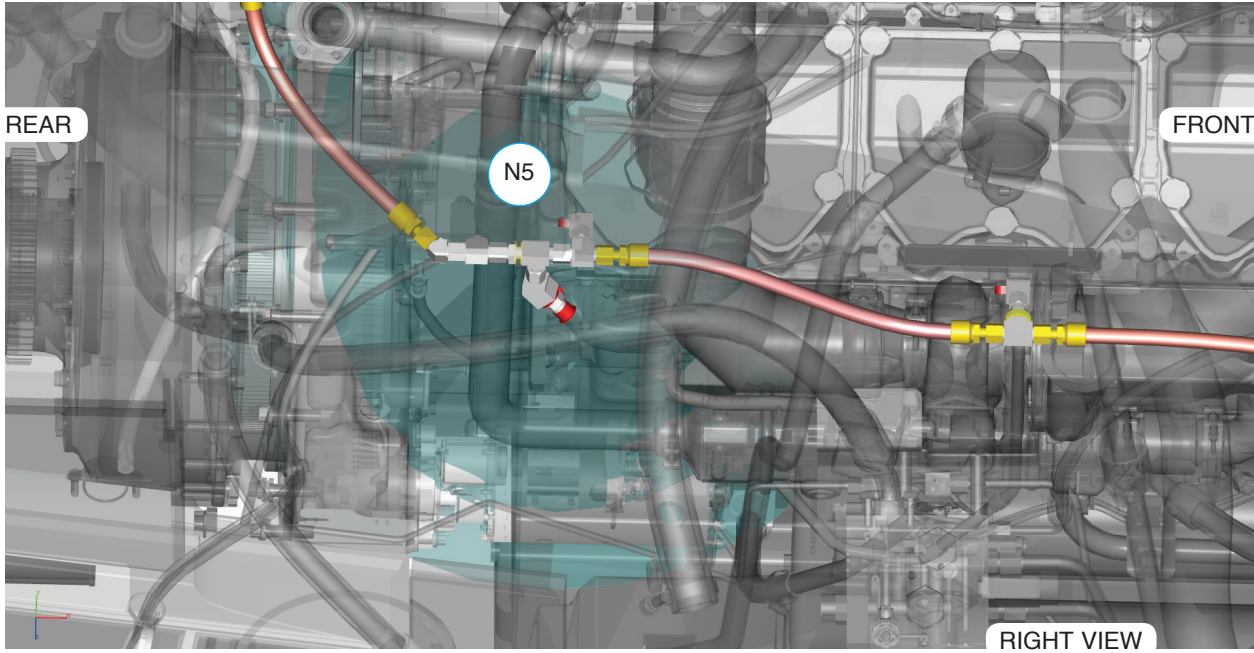

N6 NOZZLE

Locate N6 nozzle on right side and mount on an existing nozzle mounting point.

- Aim nozzle down and in
- Covers the right side turbocharger

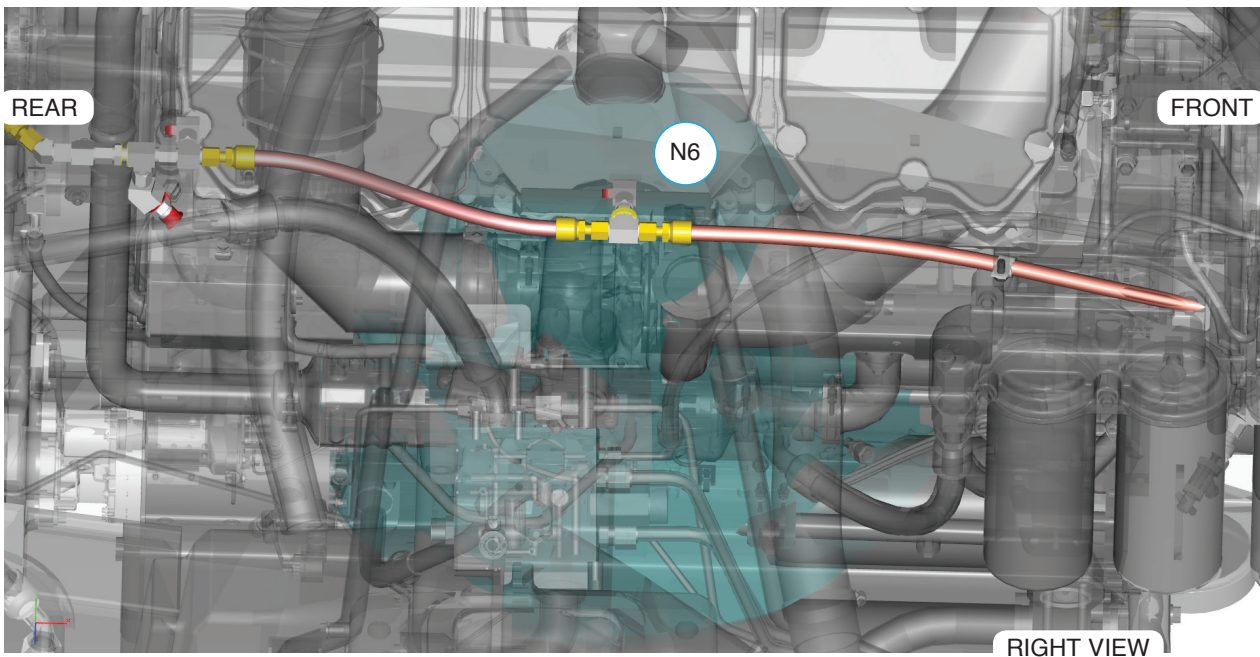

CAT 777G, LVS-9.5 NOZZLE SCHEDULE


(Form No. F-2017223-00)

PAGE 4 REV. 0 2017-SEP-22

N7 NOZZLE

Locate N7 nozzle on right corner of engine compartment and mount on an existing nozzle mounting point.


- Aim nozzle down and in
- Covers the oil filters

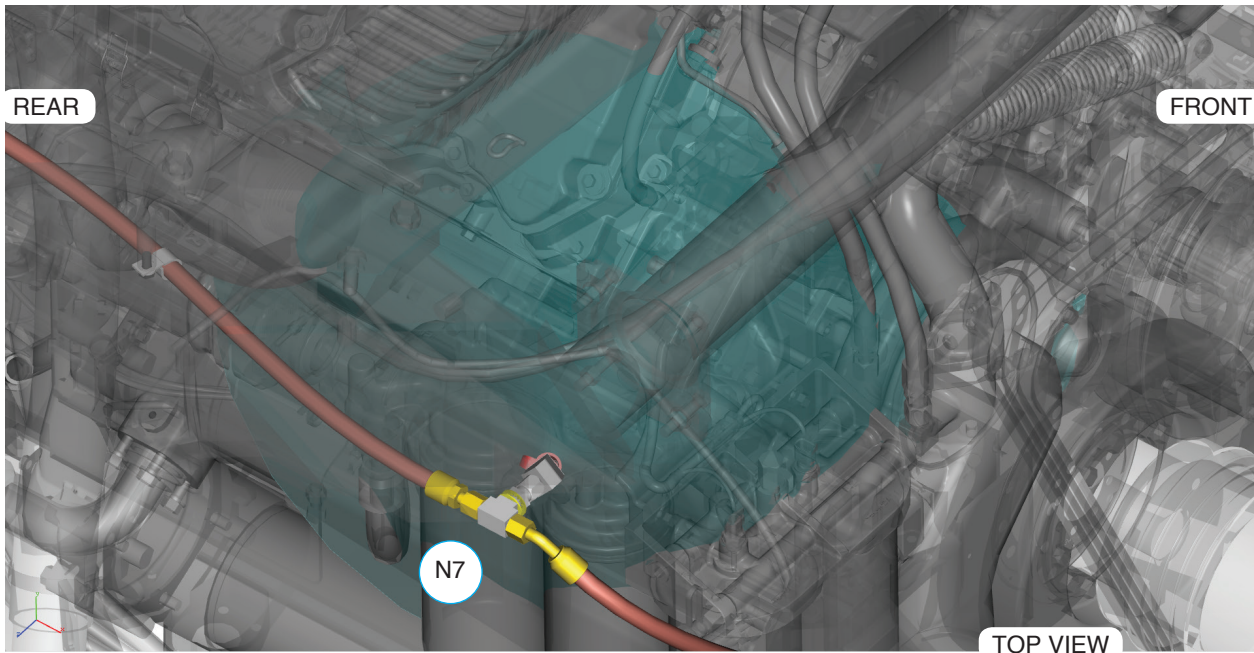

N8 NOZZLE

Locate N8 nozzle on lower right corner of engine compartment and mount on an existing nozzle mounting point.


- Aim nozzle up and in
- Covers the right side turbocharger

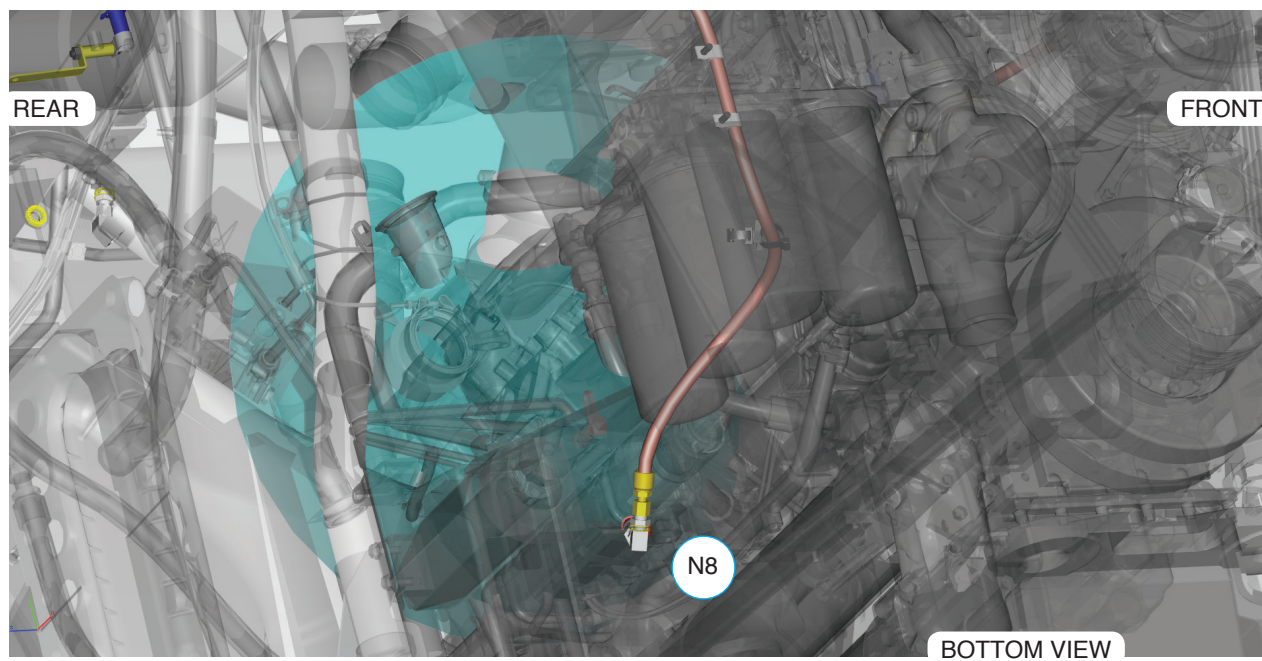

N9 NOZZLE

Locate N9 nozzle on upper left side of engine compartment and attach to an adapter tee mounted on an existing nozzle mounting point.


- Aim nozzle down, in, and rearward
- Covers the exhaust manifolds and mufflers

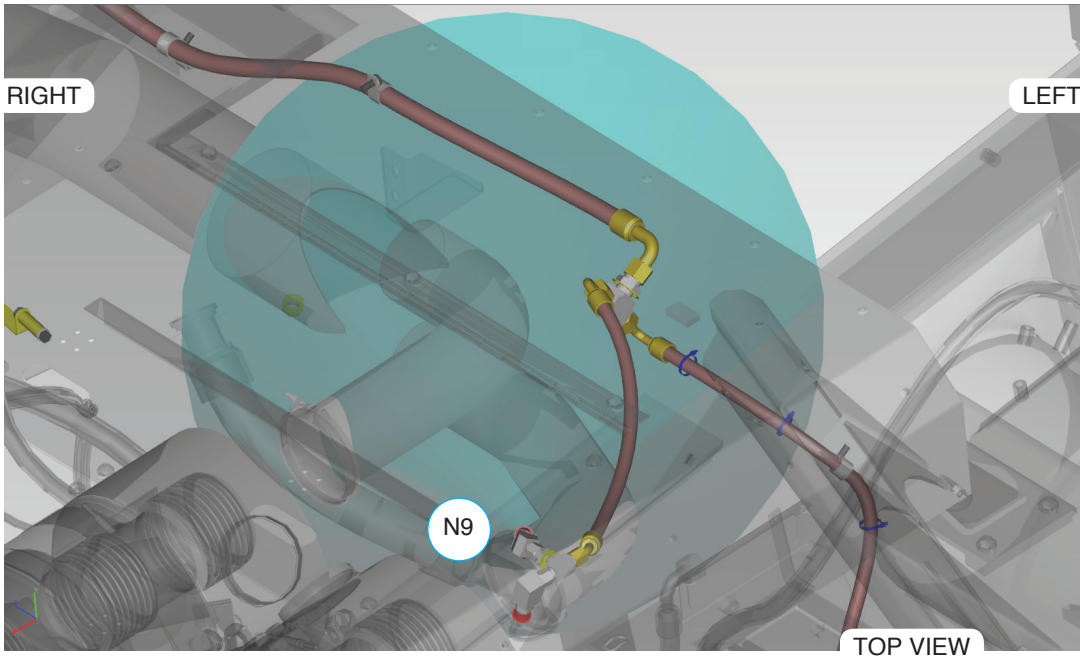

N10 NOZZLE

Locate N10 nozzle on upper left side of engine compartment and attach to an adapter tee mounted on an existing nozzle mounting point.

- Aim nozzle down, in, and rearward
- Covers the exhaust manifolds and mufflers

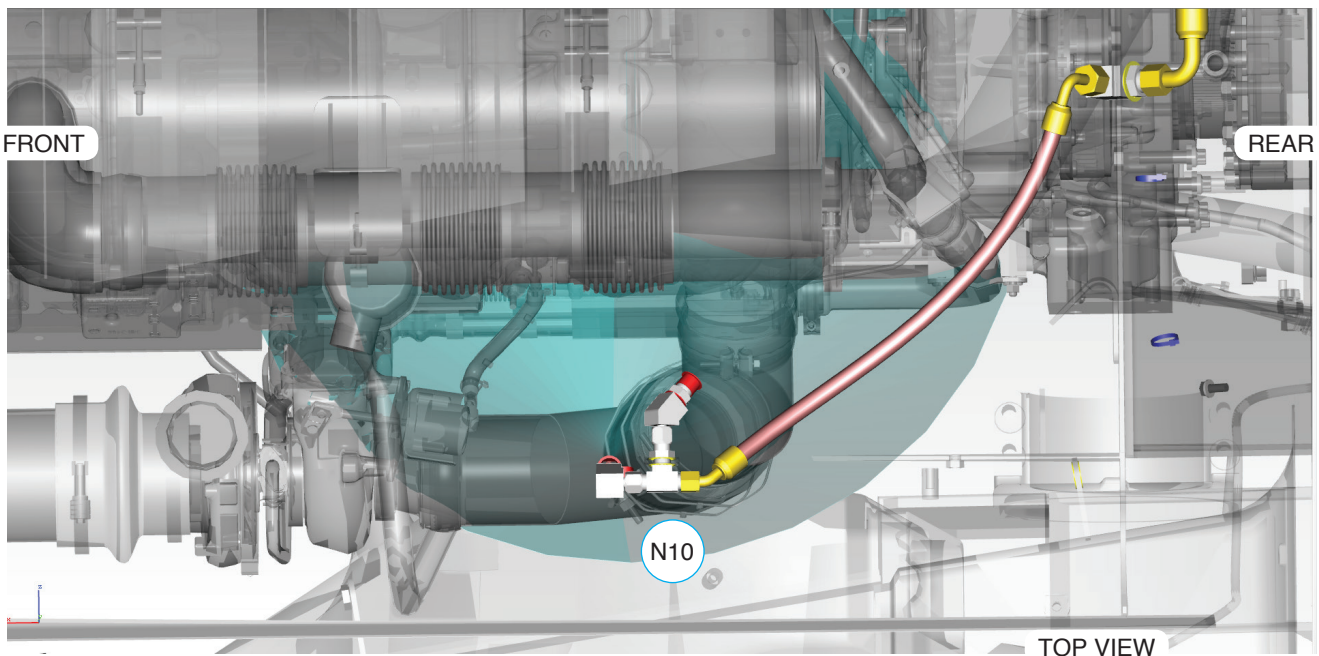

CAT 777G, LVS-9.5 NOZZLE SCHEDULE


(Form No. F-2017223-00)

PAGE 6 REV. 0 2017-SEP-22

N11 NOZZLE

Locate N11 nozzle on left side of rear engine compartment and attach to an adapter tee mounted on an existing nozzle mounting point.


- Aim nozzle down, in, and rearward
- Covers the transfer case/ transmission

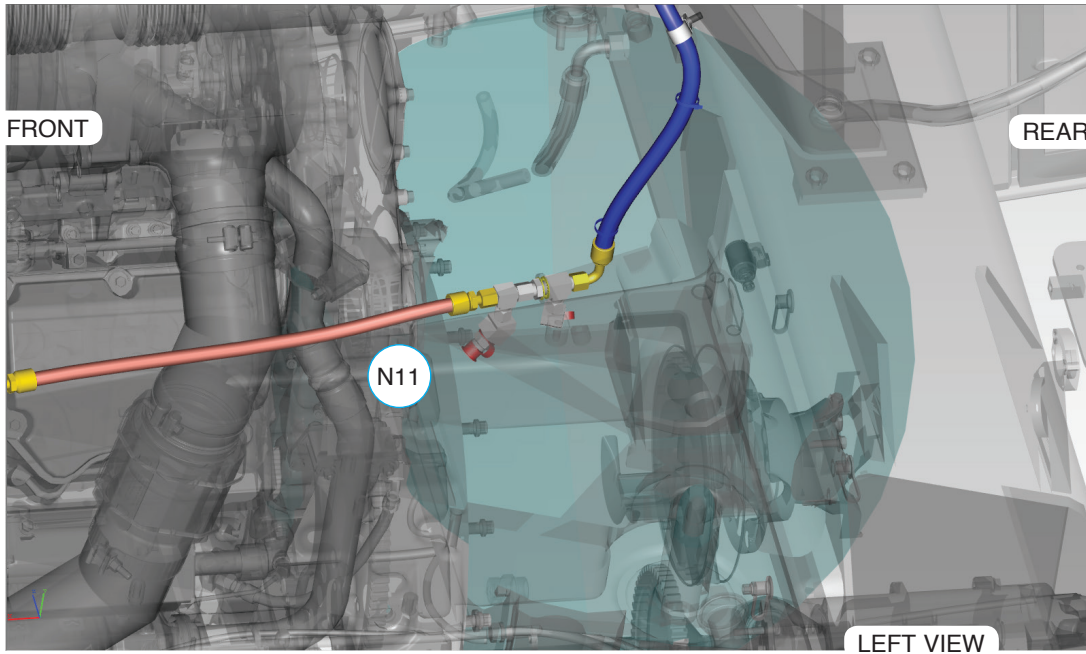

N12 NOZZLE

Locate N12 nozzle on left side of rear engine compartment and attach to an adapter tee mounted on an existing nozzle mounting point.


- Aim nozzle down and forward
- Covers rear of engine

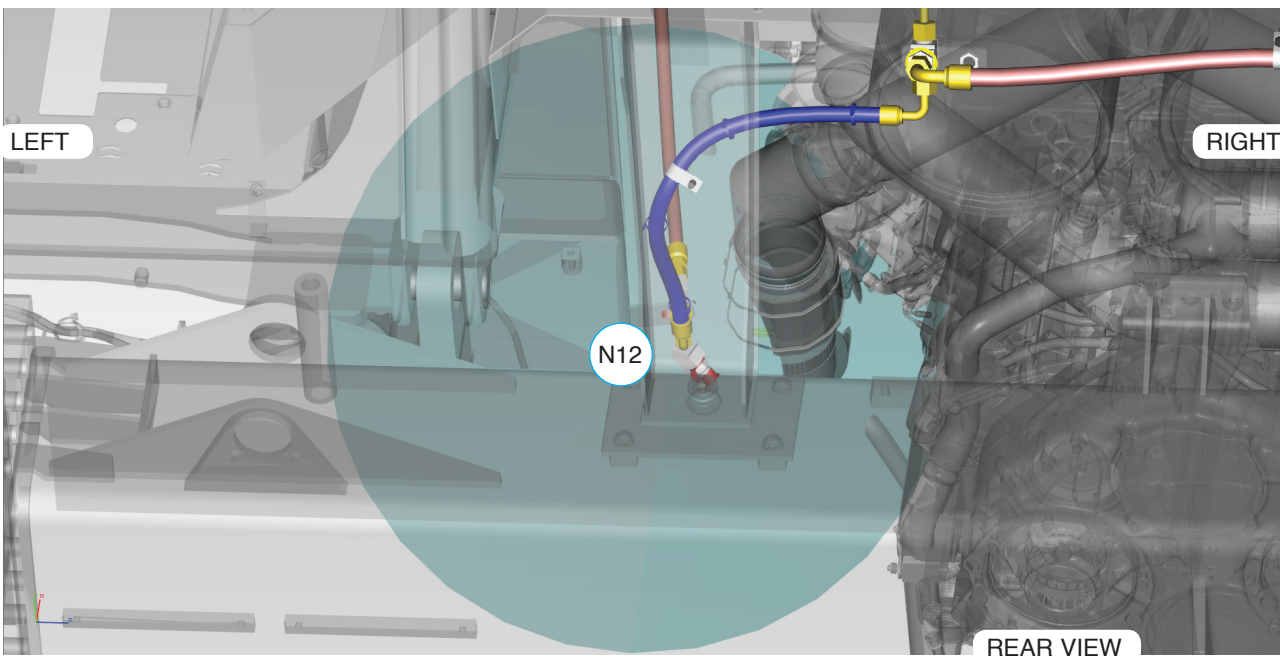

N13 NOZZLE

Locate N13 nozzle on left side of engine compartment and mount on an existing nozzle mounting point.


- Aim nozzle down and in
- Covers the left side turbocharger

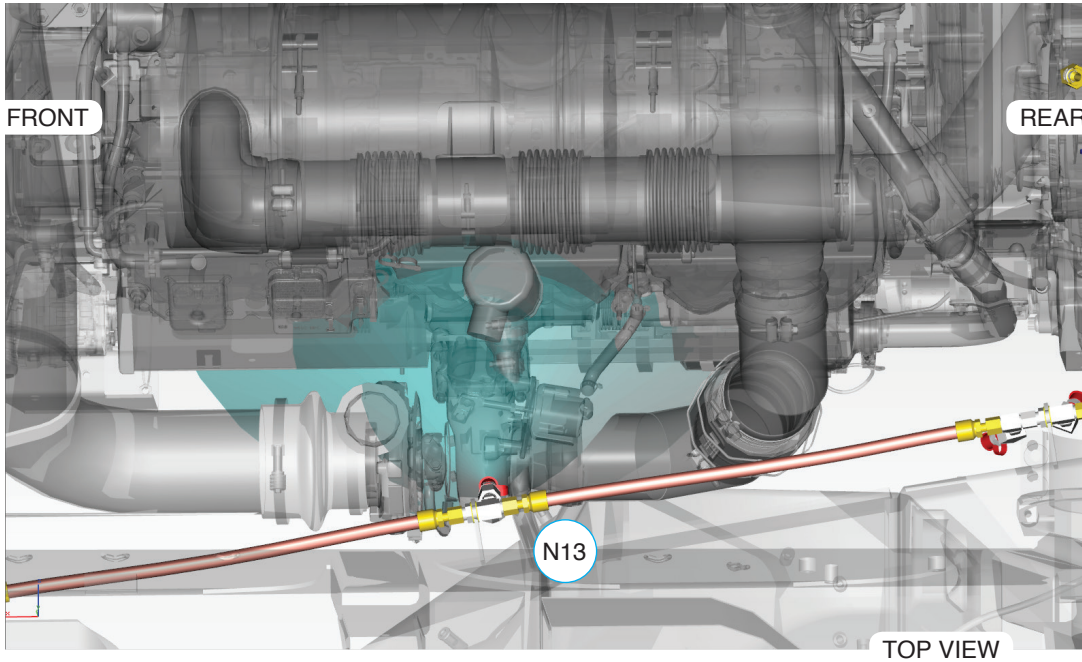

N14 NOZZLE

Locate N14 nozzle on left corner of engine compartment and mount on an existing nozzle mounting point.

- Aim nozzle down, in, and rearward
- Covers front left side of the engine

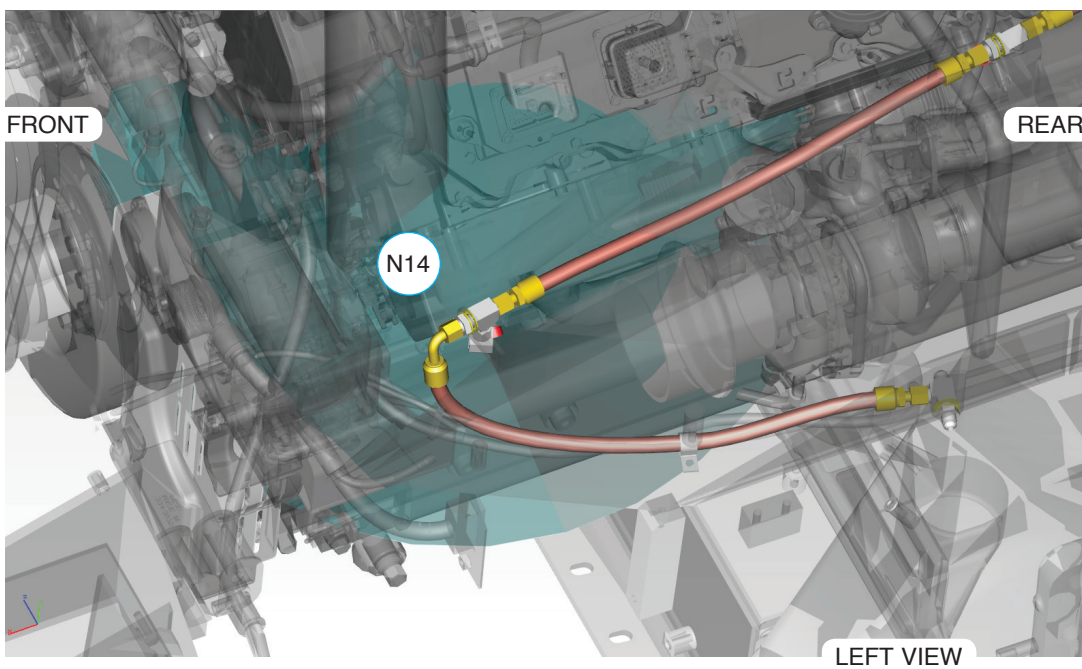

CAT 777G, LVS-9.5 NOZZLE SCHEDULE


(Form No. F-2017223-00)

PAGE 8 REV. 0 2017-SEP-22

N15 NOZZLE

Locate N15 nozzle beneath cab and mount on an existing nozzle mounting point.


- Aim nozzle up and forward
- Covers underneath the cab for operator egress

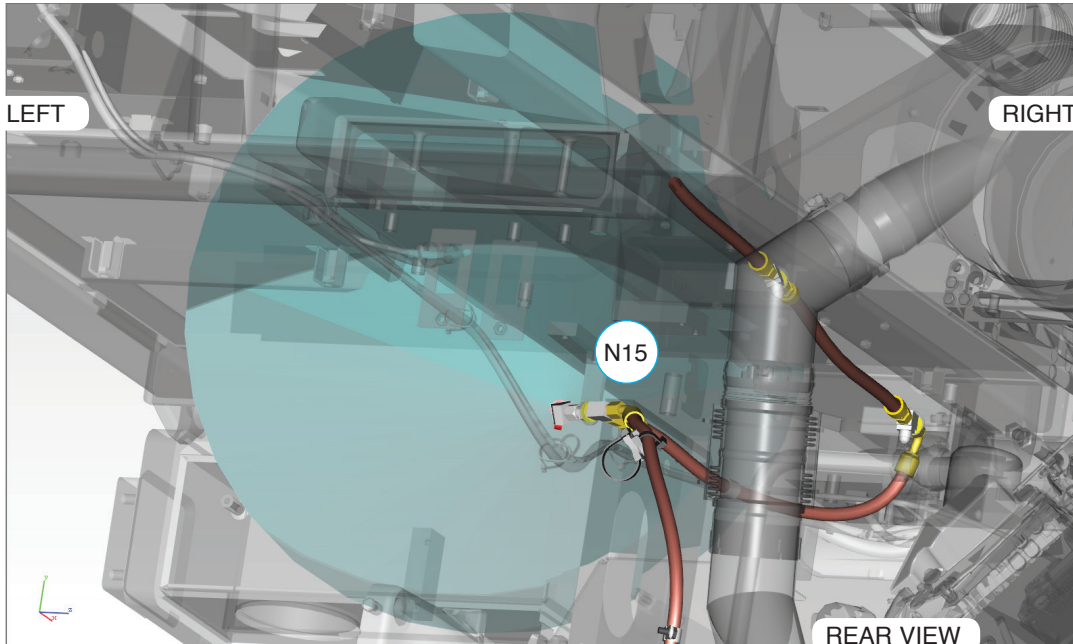

N16 NOZZLE

Locate N16 nozzle on lower left corner of engine compartment and mount on an existing nozzle mounting point.

- Aim nozzle up and rearward
- Covers the left side turbocharger

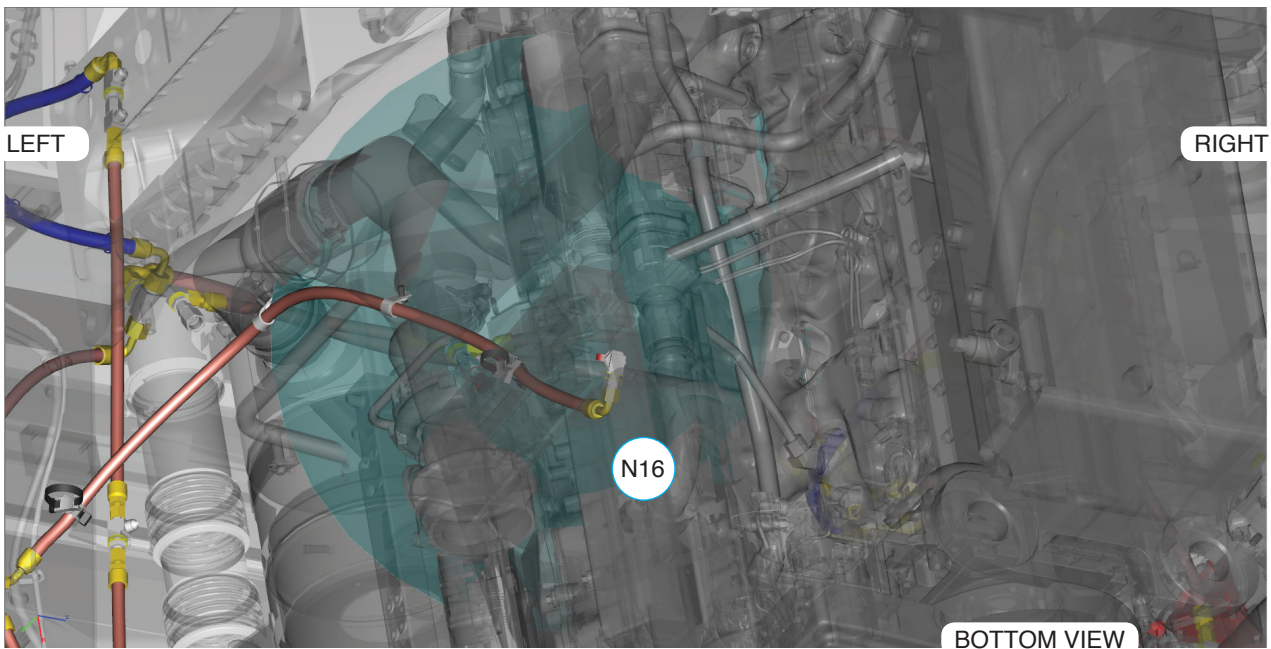

CAT, and CATERPILLAR are trademarks of Caterpillar Inc.

ANSUL, LVS, and the product names in this material are marks and/or registered marks. Unauthorized use is strictly prohibited.